

AWOE8458

本機具有自動安全保護功能，在出現故障早期自動檢測、診斷，並作出適當調整。

- A. 開門指示燈
- B. 智能自檢指示燈
- C. 入水喉關閉指示燈
- D. 清理過濾器指示燈
- E. 程序選擇鈕
- F. 啓動/暫停鍵



- G. 脫水時間選擇鍵
- H. 脫水速度選擇鍵
- I. 程序過程顯示
- J. 重設鍵
- K. 預校開機時間鍵
- L. 時間和溫度顯示屏
- M. 自選溫度鍵
- N. 附加功能鍵

洗衣程序	衣物標籤	衣物種類/骯髒程度 - 洗衣溫度的選擇，請按照衣物標籤上的建議	最大洗 衣量 (公斤)	洗衣劑和柔順劑			洗衣功能選擇								中途 加減 衣物	最高脫水 轉速 轉/分鐘
				預洗 I	主洗 II	柔順劑 III	預校 開機	自選 溫度	除菌 浸泡 預洗	深層 過水	延遲 脫水 IV	自選 時間	脫水 速度	脫水 時間		
棉質 冷水,30°C,40°C,..., 80°C,95°C	95° 60° 30° 40°	非常骯髒到中度骯髒的亞麻桌布，毛巾、襯衫等全棉或亞麻織物。 對於非常骯髒的衣物，可選擇“預洗”功能。	7.5	*	是	*	*	*	*	*	*	*(3)	*	—	*	1200
合成纖維 冷水,30°C,40°C	30° 40°	中度骯髒的上衣、襯衫、及其他合成纖維衣物（滌綸、聚酯纖維）外衣， 或棉混紡織物	2.5	*	是	*	*	*	*	*	*	*	*	—	*	1000 (1)
混合洗 冷水,30°C,40°C,50°C,60°C	40° 40°	輕微骯髒、中度骯髒的棉質或合成纖維衣物。	3.0	*	是	*	*	*	*	*	*	*	*	—	*	1200
極速洗 冷水,30°C	30° 30°	穿著時間不長或是新買的外套，棉、聚酯纖維、聚酰胺和混紡運動服。	2.0	—	是	*	*	*	—	*	*	*	*	—	*	1000
絲質/纖幼 冷水,30°C	30°	細軟物料料的裙子、襯衫、外套以及可機洗的真絲織物（參照衣物所附的洗滌標籤）	1.5	*	是	*	*	*	*	*	*	*	*	—	—(4)	1000 (1)
羊毛 冷水,30°C,40°C		只能洗滌有羊毛標記、標識可機洗的表面平整的羊毛織物。 如果選擇了“延遲脫水”，不要讓衣物長時間浸泡。	1.0	—	是	*	*	*	—	*	*	—	*	—	—	1000 (1)
手洗 冷水,30°C,40°C		標識為手洗的亞麻、絲綢、人造絲 如果選擇了“延遲脫水”，不要讓衣物長時間浸泡。程序結束時輕柔脫水。	1.0	*	是	*	*	*	*	*	*	*	*	—	—(4)	400 (2)
大型物件 冷水,30°C,40°C,..., 80°C,95°C	95° 60° 30° 40°	適用於大型的物件，如窗簾、床單、被套等。	7.0	*	是	*	*	*	*	*	*	*(3)	*	—	*	1200
貼身衣物 冷水,30°C,40°C		適用於纖幼的女士內衣或有蕾絲的輕柔織物。	1.0	*	是	*	*	*	*	*	*	*	*	—	—(4)	400 (2)
95°抗菌 70°C,80°C,95°C	95°	可以有有效的殺滅衣物中的細菌，適用於高溫殺菌的棉織物，如嬰兒衣物等。	7.0	*	是	*	*	*	*	*	*	—	*	—	*	1200
滾桶清洗 冷水,30°C,40°C,50°C,60°C	—	用於清除洗衣機使用一段時間後可能滋生的細菌和污物。（如需清潔劑，請選擇 含氯漂洗劑或無泡專用清潔劑，如使用清潔劑不當可能會造成泡沫自皂盒外溢的 情況，此屬正常現象）	—	—	是	—	*	*	—	—	*	—	*	—	—	400
過水+脫水	—	與“棉質”程序的最後一次過水、脫水過程相同。	7.5	—	—	*	*	—	—	*	*	—	*	—	—	1200
脫水	—	脫水時間和脫水轉速可另行選擇。	7.5	—	—	—	*	—	—	—	—	—	*	*	—	1200
排水	—	此程序只排水，不脫水。可作為“延遲脫水”後不脫水，結束程序。	—	—	—	—	*	—	—	—	—	—	—	—	—	—

- ❄ 可選 I是：必須加入 I-：不可選
- (1) 爲了呵護衣物，脫水速度限制爲1000轉/分鐘。
- (2) 爲了呵護衣物，脫水速度限制爲400轉/分鐘。
- (3) 僅適用於溫度低於70°C時。
- (4) 如果選擇除菌浸泡預洗，則中途加減衣物功能可選。

惠而浦(Whirlpool)是美國惠而浦公司注冊商標

基本程序表



性能數據		
程序	溫度 (℃)	程序持續時間※ (大約)(小時: 分鐘)
棉質※※	70,80,95	2:15
棉質※※※	60	2:08
棉質	冷水(20),30,40,50	1:54,1:55,1:59,2:01
合成纖維	冷水(20),30,40	1:10,1:11,1:15
混合洗	冷水(20),30,40,50,60	0:45,0:46,0:50,0:58,1:05
極速洗	冷水(20),30	0:16,0:17
絲質/纖幼	冷水(20),30	0:39,0:40
羊毛	冷水(20),30,40	0:41,0:42,0:46
手洗	冷水(20),30,40	0:35,0:36,0:40
有型物件	20,30,40,50,60,70,80,95	1:54,1:55,1:59,2:01,2:08, 2:15,2:15,2:15
貼身衣物	冷水(20),30,40	0:35,0:36,0:40
95° 抗菌	70,80,95	2:15
滾桶清洗	冷水(20),30,40,50,60	0:50,0:51,0:55,1:03,1:10

性能數據是按照IEC EN60456 標準，在正常條件下測試結果，家庭使用時實際耗水、耗電量與水溫、水壓以及洗滌織物種類有關。

※ 程序實際運行時間可能與表中數據不同，洗衣機能根據洗滌條件自動調整。

※※ 為降低水溫，防止衣物起皺，主洗過程結束後、排水前，自動加入冷水降溫。

※※※ 標準測試洗衣機程序

加入洗衣劑，關好機門，選擇程序

按照使用手冊中“洗衣劑和添加劑”章節描述，加入洗衣劑，關好機門。（請選擇適合前置式洗衣機的無泡或者低泡洗衣劑）

- 轉動程序選擇鈕到所需程序位置。
- 剩餘時間顯示窗口顯示所有程序的時間（時、分）和預設洗衣溫度，**啓動/暫停**鍵旁的指示燈閃爍。
- 程序建議的脫水轉速燈點亮。

選擇附加功能

按附加功能鍵一次顯示當前值，連續按為循環選擇。當附加功能啓動時，對應顯示燈亮起。當選擇的程序和附加功能不可組合時，不能組合的功能自動取消，指示燈自動熄滅。

除菌浸泡預洗

- 在浸泡格中加入除菌劑。
建議使用粉狀衣物除菌劑，若使用液體除菌劑，建議在洗衣機浸泡進水時，同時由浸泡格加入。
- 適用於需要除菌或非常骯髒的衣物，浸泡時間可選擇18、28、38和48分鐘。浸泡過程中，前18分鐘桶有洗衣的動作，後面處於靜止狀態直到浸泡時間結束。浸泡結束，排水。

自選時間

- 用戶可以通過**自選時間**功能鍵調節程序的洗衣時間。根據不同洗衣程序，最大調節範圍為-40～10分鐘。


深層過水

- 最多選擇增加三次過水，過水時間延長。
- 此功能適合於軟性水質的地區，或清洗嬰兒衣物，或皮膚對洗衣劑敏感的人。

脫水時間

- 該程序僅適用於單脫水程序。
- 用戶可通過**脫水時間**鍵從4分鐘、8分鐘、11分鐘和16分鐘中任選一種脫水時間。

脫水轉速/延遲脫水

- 程序默認的就是對應程序的最高脫水轉速。
- 按鍵選擇其他脫水轉速。
- 如果選擇脫水轉速“0”，最後脫水過程被取消，程序結束時只排水，但過水過程仍脫水。
- 如果選擇“**延遲脫水**”，洗滌衣物留在最後一次過水中，不脫水。可避免衣物顏色變暗、起皺。
為了啓動“延遲脫水”功能，連續按“**脫水轉速**”鍵直到“延遲脫水”符號/燈亮起。

如何終止延遲脫水

- 如果不想對衣物脫水而結束“延遲脫水”，按“**啓動/暫停**”鍵，程序排水。
- 如果想對衣物脫水，按“**脫水速度**”鍵選擇期望的速度，然後按“**啓動/暫停**”鍵開始脫水。

溫度控制

當選擇某個程序時其預設的溫度將在顯示窗中顯示，如果需要對其進行調整，可按“**自選溫度**”鍵。

中途加減衣物

如果在洗衣過程中需要添加衣物，請按“**啓動/暫停**”鍵。

- 若可中途開門，則顯示窗中的三位時間顯示跳閃，待開門指示燈亮後，可以開門添衣。
- 若顯示窗中三位時間顯示不跳閃，則說明該程序不允許中途添加衣物或溫度大於40℃或中途添衣允許時間已過。

時間預約

預校開機時間功能允許你在方便的時候進行操作，如在晚上電力便宜的時候。

- 選擇程序、溫度、附加功能。
- 按“**預校開機時間**”鍵，選擇10分鐘～23小時延遲時間。
- 按“**啓動/暫停**”鍵，預約指示燈點亮，倒計時開始。
- 當程序開始後，預校開機時間指示燈熄滅，數碼窗口顯示剩餘時間。
- 一旦按下“**啓動/暫停**”鍵，再次按壓“時間預約”鍵可修改設定的預校時間。

取消預校開機時間

- 在按“**啓動/暫停**”鍵之前，旋轉程序選擇鈕到另一程序位置，或按“**重設**”鍵。
- 在按“**啓動/暫停**”鍵之後，按住“**重設**”鍵3秒鐘，預校時間從顯示窗消失。

啓動程序

打開水龍頭，按“**啓動/暫停**”鍵開始洗衣程序，“**啓動/暫停**”鍵旁的指示燈亮起。程序過程指示燈顯示當前程序進程，從左到右依次顯示主洗、過水、脫水/排水。時間顯示窗顯示程序剩餘時間。

開門指示

啓動程序前和程序結束後，指示燈亮起顯示門可打開。只要程序正在運行，機門保持鎖定，不許強行打開以免損壞機器。如果急需在程序運行中開門，請參考“**程序結束前 取消/重設**”。

紅燈警示

入水喉關閉顯示燈亮起

洗衣機沒有供水或供水不足。打開水龍頭，如果指示燈仍然亮起，參考使用手冊“故障排除”。

清理過濾器指示燈亮起

洗滌用水沒有排出。檢查排水管是否打結、堵塞，清理過濾器。如果屬後者情況，請參考使用手冊“清理過濾器”。

智能自檢指示燈亮起

如機器在運行過程中出現故障，智能自檢指示燈亮起，並在LED顯示屏顯示故障代碼，具體代碼參考說明書。

程序結束

- 所有程序過程指示燈熄滅，“開門”指示燈亮起

- 把程序選擇鈕轉到“關”位置。
- 關閉水龍頭。
- 打開機門，取出洗滌衣物。
- 機門微開讓洗衣桶吹乾。

程序開始後更改程序、附加功能

- 按“**啓動/暫停**”鍵中止程序，指示燈閃爍。
- 選擇新程序、附加功能。如果需要，選擇脫水轉度。
- 再次按“**啓動/暫停**”鍵開始新程序。

新程序在上一個程序中止的位置繼續運行，因此不要再添加洗衣劑。

程序結束前取消/重設

在程序結束前，按“**重設**”鍵取消程序。

- 按“**重設**”鍵至少3秒鐘，在開門前排出洗衣機桶內水。

惠而浦是美國**Whirlpool** 公司的註冊商標
W10333193








 











 
 


AWO8548

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately, e.g.:

- A. "Door Open" indication
- B. "I-Check" indication
- C. "Water Tap Closed" indication
- D. "Clean Pump" indication
- E. Programme selector
- F. "Start/Pause" button
- G. "Spin Time" selector



- H. "Spin Speed" / "Rinse Hold" selector
- I. Programme sequence indicator
- J. "Reset" button
- K. "Start Delay" button
- L. Time and Temperature display
- M. "Temp." button – Temperature adjustment
- N. "Prewash" - "Wash Time" - "Intensive Rinse"-option buttons

Programme	Care Labels	Type of wash/Notes –for temperature selection, respect the manufacturer's recommendations on the care label	Max. Load Kg	Detergent and additives			Special options								Midway Adding	Max.Spin Speed rpm
				Pre wash 	Main Wash 	Softener 	Start Delay	Temp.	Pre wash	Intensive Rinse	Rinse Hold 	Wash Time	Spin Speed	Spin Time		
Cotton Cold, 30°,40°,···, 80°, 95°C	   	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts, etc, made of cotton and linen.	7.5	*	Yes	*	*	*	*	*	*	* ₍₃₎	*	—	*	1200
Synthetics Cold, 30°,40°C	 	Normally soiled blouses, shirts, overalls, etc, made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	*	*	—	*	1000 ⁽¹⁾
Mix Wash Cold, 30°,40°, 50°,60°C	 	Slightly to normally soiled textiles made of cotton and/or synthetics.	3.0	*	Yes	*	*	*	*	*	*	*	*	—	*	1200
Quick Wash Cold, 30°C	 	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	2.0	—	Yes	*	*	*	—	*	*	*	*	—	*	1000
Silk/Delicates Cold, 30°C		Delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	*	*	*	*	*	*	—	— ⁽⁴⁾	1000 ⁽¹⁾
Wool Cold, 30°,40°C		Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by the Woolmark Corporation for machine washable wool. If you select "Rinse Hold" do not leave items to soak for too long.	1.0	—	Yes	*	*	*	—	*	*	—	*	—	—	1000 ⁽¹⁾
Hand Wash Cold, 30°,40°C		Textiles made of silk, linen, wool and viscose, marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.	1.0	*	Yes	*	*	*	*	*	*	*	*	—	— ⁽⁴⁾	400 ⁽²⁾
Big Items Cold, 30°,40°,···, 80°, 95°C	   	Big sized items, curtains, bed linen and quilt cover etc.	7.0	*	Yes	*	*	*	*	*	*	* ₍₃₎	*	—	*	1200
Lingerie Cold, 30°,40°C		Delicate lingerie and textile with lace.	1.0	*	Yes	*	*	*	*	*	*	*	*	—	— ⁽⁴⁾	400 ⁽²⁾
95° Antibacterial 70°, 80°,95°C		Heavily soiled textile items, such as baby's items, require a high wash temperature to eliminate bacteria. At a temperature of 95 °C, this programme eliminates bacteria, by ensuring sanitization of the laundry. The bacteria removal efficiency has been tested by following a similar methodology, to the NF EN 13697 Standard of Nov. 2001.	7.0	*	Yes	*	*	*	*	*	*	—	*	—	*	1200
Drum Clean Cold, 30°,40°, 50°,60°C	—	In this programme, the drum can be cleaned, when required. Detergent quantity should be approximately a quarter of that used for a normal load.	—	—	Yes	—	*	*	—	—	*	—	*	—	—	400
Rinse & Spin	—	Same as the last rinse and the final spin in the "Cotton" programme.	7.5	—	—	*	*	—	—	*	*	—	*	—	—	1200
Spin	—	In this programme spin speed and spin time can be selected.	7.5	—	—	—	*	—	—	—	—	—	*	*	—	1200
Drain	—	Drain only – no spinning. Alternative method of terminating programme after "Rinse Hold".	—	—	—	—	*	—	—	—	—	—	—	—	—	—

* optional / Yes: dosing required.

(1) For improved garment care, spin speed is restricted to 1000 rpm in this program.

(2) For improved garment care, spin speed is restricted to 400 rpm in this program.

(3) Option available for use under 70 °C.

(4) Midway Adding Option available when choose Pre Wash.

Whirlpool is a registered trademark of Whirlpool USA

BASIC CHART

PROGRAMME DATA

Programme	Temperature °C	Approx. Duration (hours:minutes)**
Cotton**	70,80,95	2:15
Cotton***	60	2:08
Cotton	Cold water(20),30,40,50	1:54,1:55,1:59,2:01
Synthetics	Cold water(20),30,40	1:10,1:11,1:15
Mix Wash	Cold water(20),30,40,50,60	0:45,0:46,0:50,0:58,1:05
Quick Wash	Cold water(20),30	0:16,0:17
Silk/Delicates	Cold water(20),30	0:39,0:40
Wool	Cold water(20),30,40	0:41,0:42,0:46
Hand Wash	Cold water(20),30,40	0:35,0:36,0:40
Big Items	20,30,40,50,60,70,80,95	1:54,1:55,1:59,2:01,2:08,2:15,2:15,2:15
Lingerie	Cold water(20),30,40	0:35,0:36,0:40
95° Antibacterial	70,80,95	2:15
Drum Clean	Cold water(20),30,40,50,60	0:50,0:51,0:55,1:03,1:10

** The actual running time can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

*** To reduce water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference programme for Energy and Water Labelling, according to the IEC EN60456, GB/T4288.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use. The detergent can also be added as a solution dissolved in warm water. (Always use high efficiency, low foam detergent for front load washing machine.)

1. Turn the **programme selector** to the desired programme and temperature.
2. The **time display** shows the duration of the chosen programme (in hours and minutes), and the **"Start / Pause"** indication lamp is flashing.
3. The **indication lamp** of the predefined spin speed lights up.

SELECT ANY DESIRED OPTION

Press the selected option button once, the current value is displayed on the display. By pressing the button repeatedly, the display will display the values in sequence. By pressing the button of the desired option, the respective indicator lights up. When the combination of programme and additional options is not possible, the indication lights switch off automatically.

"Prewash" button:

• Only for heavily soiled loads (for example, sand, granular dirt, etc.). Initial set time for the **"Prewash"** is about 18 minutes, during which the drum will rotate. The **"Soak"** time, which will commence after the **"Prewash"** cycle, can be increased by 10 minutes for each additional press of the button. Press the **"Prewash"** button to set the desired **"Soak"** time. The appliance will complete the **"Prewash"** cycle, lasting about 18 minutes and then keep the laundry soaked, up to the selected time. The water is then drained out.

"Wash Time" button:

• The wash time can be adjusted by pressing the button. According to different programme, the max. adjustable scope is -40~10 mins.

"Intensive Rinse" button:

- An extra rinse is added for each press of the button. Up to 3 rinses can be selected, to prolong the rinse cycle.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with allergies.

"Spin Time" button:

- Applies only to the **"Spin"** programme. The duration of spin can be decreased from the maximum of 16, 11, 8 and 4 mins.

"Spin Speed" button:

- Every programme has a pre-defined max. spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spin is cancelled, but intermediate spin peaks remain during the rinse cycle. Only the water is drained out.

"Rinse Hold" button:

- To select **"Rinse Hold"**, press the **"Spin Speed"** button repeatedly, until the **"Rinse Hold"**, symbol  lights up.
- The laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing of the laundry.
- Do not leave the laundry to soak for too long in the **"Rinse Hold"** state, to prevent colours from being affected.
- The programme stops at **"Rinse Hold"** when the **"Rinse Hold"** light in the programme sequence indication is on. Also, the indication lamp next to the **"Start / Pause"** button flashes.

- To terminate **"Rinse Hold"**, by spinning the laundry, press the **"Spin Speed"** button to select the desired spin speed and then press the **"Start / Pause"** button.
- To terminate **"Rinse Hold"** without any spinning, press the **"Start / Pause"** button.

TEMPERATURE CONTROL

On selecting a programme, a predefined temperature is displayed. Press the **"Temperature"** button to set another.

Midway Adding

If want to add laundry during washing process, Press the **"Start / Pause"** button.

- If door open in the midway is available, the time display is flashing. open the door to add the laundry when the **"Door Open"** indication lamp lights up.
- If the time display is not flashing, it means programme is not available to choose **"Midway Adding"** or the temperature exceed 40° or the available time of **"Midway Adding"** have passed.

START DELAY

The **"Start Delay"** function allows the machine to be run at the consumer's convenience, for example at night when electricity is cheaper.

- Select the programme, temperature and the required options.
- Press the **"Start Delay"** button to select one of the delay time steps between 0:10 and 23:00 hours.
- Press the **"Start / Pause"** button. The LED display above the **"Start Delay"** button displays the delay time and the countdown begins.
- The time delay indication disappears when the programme starts and is replaced by the remaining programme time.
- To change the time delay, once the **"Start / Pause"** button has been pressed, press the **"Start / Pause"** button and then press the **"Start Delay"** button to select the required time delay.

To Cancel "Start Delay":

To cancel the Start Delay, do one of the following:

- Turn the programme selector to another position or press the **"Reset"** button.
- Press the **"Reset"** button for at least 3 seconds, the **"Start Delay"** time disappears from the time display.

PROGRAMME START

Open the tap and press the **"Start / Pause"** button. The indication lamp next to the **"Start / Pause"** button lights up. The programme sequence indicator shows the current programme phase, from left to right, as Prewash, Wash, Rinse, Rinse Hold and Spin / Drain. The time display shows the remaining programme time. Due to variations in load and the temperature of the inlet water, the remaining time is re-calculated in certain programme phases. When this occurs, the remaining programme time is replaced by an animation.

"DOOR OPEN" INDICATION

Before the start and after the end of a programme, the **"Door Open"** indication lamp, lights to show that the door can be opened. While a wash programme is running, the door remains locked and must not be forced open. In case, there is an urgent need to open it during a running programme, press the **"Start / Pause"** button and then press the **"Reset"** button. Refer to **"Cancel (Reset) a running programme before the end"**.

RED FAILURE INDICATIONS

"Water Tap Closed":

If the appliance has insufficient or no water supply, the **"Water Tap Closed"** indication will light up. Open the water tap. If the indication still lights up, refer to the **"Trouble Shooting Guide"** in the Instructions for Use.

"Clean Pump":

If the waste water is not being pumped out, the **"Clean Pump"** indication will light up. Check whether the drain hose or the filter requires to be cleaned. In the latter case, refer to, **"Removing the Filter"** in the Instructions for Use.

"I-Check":

If a failure occurs during the programme, the indication lamp lights up and the failure code appears on the LED display. To understand the meaning of the respective failure code, refer to the **"Fault Description Table"** in the Instructions for Use.

PROGRAMME END

- The display shows **"End"**, along with an audible signal, and the **"Door Open"** indication lights up.
 - All the lights of the programme sequence indicators are off.
1. Turn the programme selector to the **"Off / O"** position.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar, to allow the drum to dry.

CHANGE PROGRAMME AND / OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start / Pause"** button to pause the programme. The indication light flashes.
2. Select the new programme, the temperature, options and the required spin speed.
3. Press the **"Start / Pause"** button again. The new programme continues at the same position, where the previous programme was interrupted. Do not add detergent again.

CANCEL / RESET A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a set programme before the end of the cycle. To reset, press the **"Reset"** button for at least 3 seconds. Water from the machine is then drained out before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA
W10332853